

SRTI-100 / SRAM-105 Remote Annunciators



SRTI-100
Remote Trouble Indicator



SRAM-105
Remote LED Annunciator

Features

- Green AC ON indicator
- Yellow Common Trouble indicator
- Trouble Silence pushbutton
- Lamp Test function

SRTI-100 Remote Trouble Indicator

- Single gang mounting
- Alarm current: 25 mA max.
- Dimensions: 2³/₄" x 4¹/₂" (70 mm x 115 mm)

SRAM-105 Remote LED Annunciator

- Alarm current: 40 mA max.
- Double gang mounting
- Dimensions: 4¹/₂" x 4¹/₂" (115 mm x 115 mm)
- Five Alarm & Supervisory LED/Zones

Description

Summit's SFC-100 Series Remote Annunciators are designed to provide LED annunciation. The remote annunciators consist of the SRTI-100 Remote Trouble Indicator and the SRAM-105 Remote LED Annunciator.

The SRTI-100 Remote Trouble Indicator provides remote trouble annunciation for the SFC-100 Series fire alarm control panels. The SRTI-100 is equipped with an AC On LED, Common Trouble LED and a Trouble Silence push button. The Remote Trouble Indicator mounts in a single gang outlet box.

The SRAM-105 Remote LED annunciator provides remote alarm and trouble annunciation for the SFC-100 Series fire alarm control panels. The SRAM-105 is equipped with an AC On LED, Common Trouble LED, a Trouble Silence push button and five alarm and supervisory LED/zones. The Remote LED Annunciator mounts in a double gang outlet box.

A maximum of four SRTI-100 and four SRAM-105 units can be connected to each SFC-100 Series fire alarm control panel.

Operation

The AC and Trouble LEDs on the remote units follow the control panel AC and Trouble LEDs. Pressing the Trouble Silence switch at the panel or at any remote unit will silence the trouble buzzer at the panel and all remote units.

Zone indicators on the SRAM-105 Remote LED Annunciator follow the zone indicators of the control panel. The red LED will operate if the panel zone is programmed for 'ALARM' and the yellow LED will operate if the panel zone is programmed for 'SUPERVISORY'.

The Lamp Test is initiated by pressing and holding the Trouble Silence push button for ½ second. The LEDs will flash until the button is released.



S24011




S24011



71-08-E

Typical Wiring Diagram

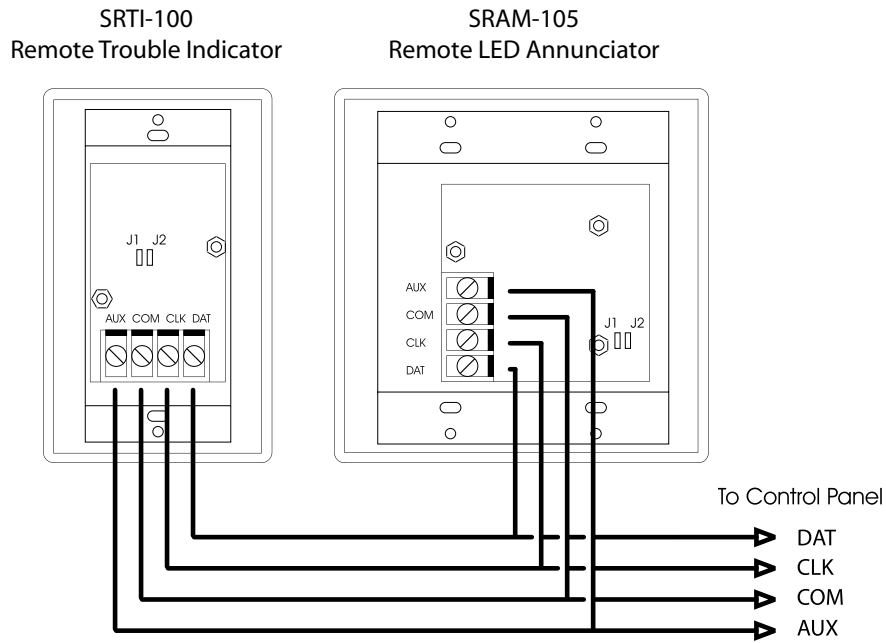

Ordering Information

Model	Description
SRTI-100	Remote Trouble Indicator
SRAM-105	Five Zone Remote Annunciator

