




SFC-500 SERIES FIRE ALARM PANEL

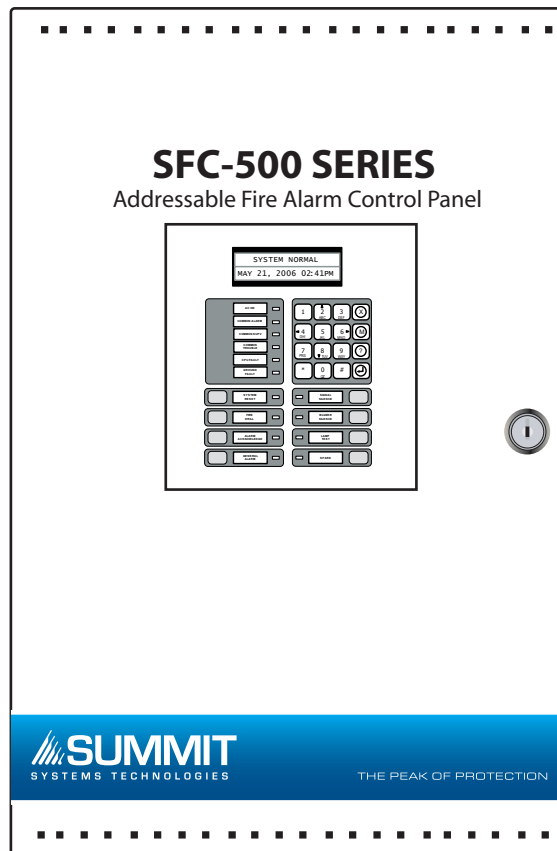

PROGRAMMING MANUAL

Canada
25 Interchange Way
Vaughan, ON L4K 5W3

U.S.A.
4575 Witmer Industrial Estates
Niagara Falls, New York 14305

Phone: 1-866-SUMMIT-0 (1-866-786-6480)

Fax: 1-888-660-4113

www.summit-st.net

Table of Contents

System Configuration	1
Auto Configuration	5
Default Configuration	5
Dialer configuration	5
Time Configuration.....	6
After Hours Configuration	6
Configuration	7
Command Mode - Configuration & Operation	9
Menu Operation	9
CONFIGURATION MENU	10
CONFIGURATION MENU/PANEL CONFIGURATION	10
PANEL CONFIGURATION/2. DEVICES CONFIGURATION	13
PANEL CONFIGURATION/3. CORRELATION	16
PANEL CONFIGURATION/4. GROUPS	16
CONFIGURATION MENU/2. AUTO CONFIGURATION	19
CONFIGURATION MENU/3. DEFAULT CONFIGURATION.....	20
CONFIGURATION MENU/4. DIALER CONFIGURATION	20
Configuration Menu/Dialer Config/1. Account Info.....	20
Configuration Menu/Dialer Configuration/2. Telephone Line	21
Configuration Menu/Dialer Configuration/3. Report Options.....	22
Configuration Menu/Dialer Configuration/4. Time Parameters	23
Configuration Menu/Dialer Configuration/5. Enable/Disable dialer.....	23
Configuration Menu/Dialer Configuration/6. Ring Detect	24
CONFIGURATION MENU/5. TIME CONFIGURATION	24
CONFIGURATION MENU/6. AFTER HOURS TIME CONFIGURATION.....	24
OPERATION MENU	26
OPERATION MENU/1. SET TIME.....	26
OPERATION MENU/2. SET PASSWORD	26
OPERATION MENU/3. REPORTS.....	27
OPERATION MENU/4. CLEAR LOGS	28
OPERATION MENU/5. WALK TEST.....	28
OPERATION MENU/6. BYPASS.....	29
OPERATION MENU/7. AUX DISC	32
OPERATION MENU/8. TEST DIALER.....	32
OPERATION MENU/9. AFTER HOURS	32
OPERATION MENU/10. CLEAR VERIFY COUNT	33
OPERATION MENU/11. EXIT	33
Reports	33
Warranty & Warning Information	35

System Configuration

The SFC-500 Series Fire Alarm Control panel is programmed via the front panel keys and LCD display. The configuration is divided into various sections:

- Panel configuration
- Auto configuration
- Default configuration
- Dialer configuration
- Time configuration
- After Hours configuration

Panel Configuration

Panel configuration is divided into various subsections. This includes system wide configurable features, device configuration for addressable and conventional devices, set correlations between input and output circuits, grouping of circuits and associate LED indicators and configure the remote switches.

CONFIGURABLE FEATURES

The basic system operation may be modified by enabling or disabling certain system wide operations as shown in the following table. When the system is first initialized these features are set to their defaults.

FEATURE	OPTIONS	DEFAULT	NOTES
Manual Signal Silence Switch When enabled allows operation of the manual signal silence switch	Enable / disable	enabled	
Fire Drill Switch When enabled allows operation of the fire drill switch	Enable / disable	enabled	
Waterflow Retard Operation If disabled, all the initiating circuits configured as waterflow act as non-verified alarms. If enabled, retard operation is performed for initiating circuits configured as waterflow.	Enable/disable	disable	
Auxiliary Disconnect, disconnects alarm and supervisory relay If enabled the auxiliary disconnect operation, disconnects alarm and supervisory relays. If disabled the auxiliary disconnect operation has no affect on the alarm and supervisory relays	Enable/disable	disabled	
Signal Silence Inhibit Timer Select the timer value for the signal silence inhibit timer.	Disable, 10sec, 20sec, 30sec, 1min	disabled	
Auto Signal Silence Timer Select timer value for the auto signal silence timer.	Disabled or 5, 10, 15, 20, or 30 minutes	disabled	1
Number of Annunciators Select number of remote annunciators. The annunciators include the SRA-300 series, SRAM-200LCD, SSR-212 and SRAM-216/208. There can be any combination of the annunciators.	None, 1 - 7	none	
Alarm Transmit Silence This feature allows the alarm transmits and auxiliary alarm relay to reset on "SIGNAL SILENCE" rather than the "RESET" switch if enabled.	Enable/disable	disabled	
Power Fail Timer This feature allows a programmed delay before the AC fail trouble is transmitted by the dialer.	0, 1, 2, 3 hours	none	

FEATURE	OPTIONS	DEFAULT	NOTES
Common Supervisory Relay This feature is used to make the common supervisory relay acts as a common alarm relay if enabled.	Enable/disable	disabled	
Signal Isolator This feature configures the loop#0 powered output circuits to have isolators connected.	Enable/disable	disabled	
Strobe Types Select the strobe manufacturer for synchronous strobes. Synchronous strobes are driven by following a different ON/OFF pattern depending on the manufacturer's specification. Once one manufacturer of strobes is selected, that is the only type to be used in the system. Normal means the strobes are not synchronized and when the circuit gets active it is turned ON steady. This feature applies to loop #0 powered output circuits, configured as strobes only	Normal, Gentex, System Sensor, Mircom, Faraday, Wheelock	Normal (No sync)	
Evacuation Code Select the evacuation code for the 2nd stage in a two stage system and for the 1st stage in a single stage system. The alert rate is always set at 20 bpm regardless of this configuration.	Continuous, March time, Temporal, California	Temporal	
Monitor Alert Alert sounds for monitor input activation.	Enable/disable	disabled	
Device LED Flashing This feature allows the LED on the addressable sensors to flash momentarily, while polling, if enabled. The input and output addressable module LED always flashes, while polling, regardless if this feature is enabled or disabled.	Enable/disable	disabled	
Class A Loop This feature configures the addressable loop as Class A, if enabled. By default the addressable loop is configured as Class B.	Enable/disable	disabled (class B)	
Auto After Hours This feature allows the daytime/nighttime mode to be set automatically if enabled.	Enable/disable	disabled	
Two Stage Operation Leave as default (Single Stage System)	Enable/disable	Disabled (Single Stage Operation)	
General Alarm Timer This feature sets the value for the general alarm timer	Disabled, 5, 10, 15, 20, 30 minutes	Disabled	3
Common Alarm Relay Operation This feature sets the operation of the common alarm for two stage system.	Both stages or second stage only	Second stage	
Agency Selection This feature selects the agency having jurisdiction for the panel. The sensitivity range of the ion and photo sensors depends on the agency selection.	ULC, ULI	ULC	



- Notes:**
1. The auto signal silence timer cannot be set shorter than the auto GA or signal silence inhibit timers.
 2. The alert buzzer always sounds for monitor inputs configured to signals.
 3. According to the Canadian National Building Code, this timer should not be set to less than 20 minutes

DEVICE AND CIRCUIT CONFIGURATION

The device and circuit configuration involves the following

- Setting up the device type and address
- Setting the sensitivity of the sensors for both daytime and nighttime operation
- Set the device as silenceable or non-silenceable
- Create a label to recognize the device on the shared display when the device is active or in trouble

The table below shows the supported devices and process types:

DEVICE / ADDER TYPE	OPTIONS
SENSORS: analog detector (ion, photo, multi-sensor and thermal)	Verified alarm Non-verified alarm Latching supervisory Non-latching supervisory Trouble Monitor
INPUT MODULES: contact input module and mini contact input module	Non-verified alarm inputs Latching supervisory Non-latching supervisory Trouble Monitor Water-flow Remote switch
OUTPUT MODULES: relay output module, supervised output module and conventional powered output circuit	signals strokes relay outputs

Only the Sensors have sensitivity settings and in some cases depend on the setting for drift compensation and the agency (UL/ULC) selection for which the panel is set up. Drift Compensation is always enabled. The Drift Compensation feature and algorithm is only applicable for the ion and photo sensor. The multi-sensor has drift compensation built into the device and the algorithm is not applicable.

The thermal sensor is not affected by the agency (UL/ULC) and/or the drift compensation setting and can be set to full range.

The devices can be configured to silenceable or non-silenceable and when configured as silenceable the device can be silenced by activation of the signal silence switch.

A "label" is used to identify the device on the shared LCD display and shows a meaningful message when the device is active or in trouble, the maximum characters allowed for the label is 20. A "label" can be assigned to all input and output addressable devices and the four on-board NAC circuits.

I/O CORRELATIONS

All types of input circuits except remote switches and any of the common system status can be correlated to signals, strokes, and relays.

By default, the Auto Configure programs new alarm inputs to activate all signal and strokes, and sets the Fire Drill Active system status to all signals and strokes. Other input types and status have no output correlations.

Each input and output may be configured to be "silenceable" or not. For signal and strobe outputs this flag indicates whether or not the circuit is turned OFF when signal silence is active. For inputs, the silenceable flag indicates whether or not signals or strokes correlated to that input will be turned OFF when signal silence is active (providing the output has the silenceable flag set). For relay outputs this flag indicates whether this output is affected by common auxiliary disconnect.

By default:

- all signals, strobes are silenceable
- all relays are silenceable (affected by auxiliary bypass)
- all verified and non-verified alarms are silenceable
- all other inputs and all the system status are non-silenceable
- Remote switch inputs may be associated with any of the common controls.

Groups

Groups are created to facilitate the LED point indication for a group of I/Os and also to facilitate the bypass operation. There are three different types of groups that can be created

- LED groups (Not available for this fire alarm system)
- Remote LED groups
- Bypass groups

Remote LED Groups

Remote LED groups are created to annunciate a number of input or output circuits, the remote LED groups are annunciated on remote LED annunciators. The same LED zone to LED groups mapping is applied to all the remote LED annunciators configured for the system. A maximum of 130 groups can be created which can be correlated to a maximum of 200 LED zones on the remote LED annunciators.

Bypass Groups

Bypass groups are created to facilitate the bypass of a group of input and/or output circuits. Associated LEDs are not mandatory for bypass groups and are not available with this fire alarm panel. There is a maximum of 64 bypass groups that can be created.

INPUT PROCESS TYPES FOR LED GROUPING	OUTPUT PROCESS TYPES FOR LED GROUPING
Alarm: 1. Non-verified alarm 2. Verified alarm 3. Waterflow	Signal: 1. Signal 2. Strobes
Supervisory: 1. Latching supervisory 2. Non-latching supervisory	Relay: 1. All process type relays
Trouble: 1. Trouble	
Monitor: 1. Monitor	

Remote Switches

Input modules can be configured as remote switches to facilitate certain common control operations remotely. The following common control switches can be associated with the input modules

- System reset
- Fire drill
- Auxiliary disconnect
- Buzzer silence
- Signal silence

Auto Configuration

Auto-configure automatically detect what devices are at what addresses. They are assigned the following types:

DEVICE / ADDER TYPE	OPTIONS	DEFAULT (Auto-Configure)
analog detector (ion, photo, multi-sensor and thermal)	Verified alarm Non-verified alarm Latching supervisory Non-latching supervisory Trouble Monitor	non-verified alarm inputs
contact input module mini module	non-verified alarm inputs Latching supervisory Non-latching supervisory Trouble Monitor Water-flow Remote switch	non-verified alarm inputs
relay output module	signals stobes relay outputs	relay outputs
supervised output module	signal stobes relay output	signal

The auto-configuration is used for the addressable loop only and does not detect any annunciators (e.g. SRAM-200LCD, etc.).



Notes: When auto-configure is run, if a device is found at the same address, the programming is not changed as long as the physical circuit type has not changed. For example, if an ion detector is changed to a thermal detector with the same address it will still be treated as the same input type but if a contact input module is changed to a contact output module the input will be deleted and a new output circuit will be added with the corresponding defaults.

Default Configuration

When the default configuration is active the system reverts back to the default configuration. The following configuration is affected

- All the configurable features revert back to default
- All the devices on the addressable loops are deleted along with their configuration.
- All the groups are deleted along with the correlation to LEDs.
- All the adders are deleted and their respective configuration for example, SRA-300 etc.
- The conventional 4 powered output circuits on loop# 0 reverts back to the default configuration with process type as signal and silence-able/non-silence able option as silence-able.
- All the dialer options revert back to default.

Dialer configuration

All the SFC-500 Analog Fire Alarm panels have a built-in dialer. The dialer provides a means to communicate the status of the panel to the remote monitoring station using dedicated phone lines. There are many standard protocols for communicating with the central monitoring station but the two commonly used are supported by this

panel, **SIA DCS** and **Contact ID**.

The dialer configuration menu will only be present on the panels with the built-in dialer.

The dialer configuration menu will have input for telephone line information, report options, time parameters and ring detection. Refer to the Dialer Configuration Menu section of the manual.

Time Configuration

The time configuration is used to set the day light saving time and to compensate the real time clock displayed on the shared display. Daylight time begins in Canada/United States on the first Sunday in April and ends on the last Sunday in October. On the first Sunday in April, the clock is set ahead one hour at 2:00 a.m. local standard time, which becomes 3:00 a.m. local daylight time. On the last Sunday in October, clock is set back one hour at 2:00 a.m. local daylight time, which becomes 1:00 a.m. local standard time.

The time compensation is required since the real time clock crystal is not completely accurate. The time may drift in the positive or negative direction. The allowed compensation is +/- 15 seconds and the compensation is applied once every day at midnight. Positive compensation is added and negative compensation is subtracted from the actual time. The default value for the compensation is 0, i.e. no compensation is applied. The best way to check the accuracy of the clock is to observe the clock for one week and see how much is the drift and in which direction, divide the drift by 7 to get the compensation value.

After Hours Configuration

The "night time" configuration is used for the after hours operation, when the system is operating in automatic mode. The after hours may be specified in three ways:

start & end time (night time)	-start time and end time for each day which are off hours -one start time and one end time can be specified (e.g. 6:00 PM and 8:00 AM)
Weekend time	-start time and end time for the weekend which are off-hours -the weekend is considered as Saturday and Sunday only
Holidays	-holidays can be specified for a certain year or can be specified for every year. -Holidays with multiple days of duration can also be configured. -Maximum of 20 holiday duration can be configured




Note: All three after hour specifications are optional. By default none are specified (system is always in "daytime" mode). If holidays are specified, the system will go into trouble when the last holiday has passed to indicate that new ones should be entered.

Configuration


The shared display consists of a 2 line by 20 characters LCD and control keys. It operates in three basic modes: status display mode, queue display mode and command mode.

Shared Display Mode	Function
Status	Status display mode shows system activity when the queues are empty.
Queue	Queue display mode is used to browse the status of all active points in the queue.
Command	Command mode allows the user to execute certain commands, perform certain system tests and configure the system at the front panel.


The following push buttons are used by the shared display:

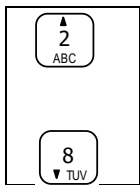


- UP/DOWN** - scroll through common alarm, supervisory, trouble and monitor queues.
- scroll through menu selections when in command mode.

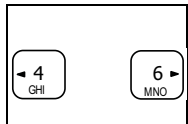


- RIGHT/LEFT** - moves to the next or previous field or digit in command mode.
- make a selection, for example, checking/unchecking the selection box.
- RIGHT key to add items for example Remote LED groups, correlation etc.
- LEFT key to delete items for example LED groups, etc.

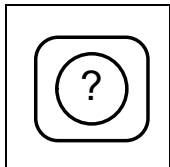


- INFO** - displays additional information for the currently selected item in queue display mode or when a pre-alarm, alarm verification or retard operation is active in status display mode.

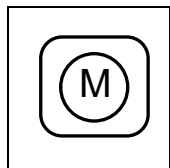

- MENU** - enter command mode or returns to base menu if already in command mode.

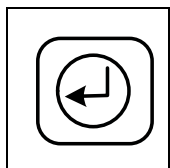

- ENTER** - accepts currently selected item or menu selection in command mode.

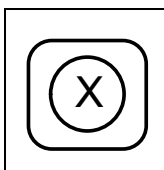

CANCEL - cancels current operation in command mode and returns to previous menu, or exits command mode if at base menu.



ALPHA NUMERIC KEYS

- some commands require the entry of numeric values, for example loop and device address for device configuration or changing the time, etc.
- some configuration requires entering the alpha keys for example, the labels for circuits. Multiple key presses are required for entering an appropriate alpha character. First key press enters the numeric character, the second key press enters the first alpha character and another key press will enter the second alpha character and so on. The sequence is repeated with subsequent key presses. **The * and # keys are used as left and right keys in this mode.**

Command Mode - Configuration & Operation

Pressing the MENU key while the shared display is in status display or queue display mode changes the display to command mode. Command mode allows the user to initiate a number of different functions from menu selections.

After 3 minutes of inactivity, the display will return to status display mode (or queue display mode if there are items in any of the queues). "Inactivity" is defined as a period of time during which none of the shared display control keys are pressed. The display will also return to the status display mode when the first alarm or supervisory alarm is queued.

Menu Operation

Menus are displayed in the following format:

---- Command Menu ---
1. Configuration ↓

Where the first line gives the menu title and the second line give the menu selections options.

Pressing the DOWN key moves the cursor down until it is on the last line at which point the display will show more options (the menu title remains unchanged):

---- Command Menu ---
2. Operation ↑

The up and down arrows at the end of the line indicates that the UP or DOWN key can be used to view more options in the direction of the arrow, if both the arrows are displayed then there are options available in both directions. Pressing ENTER activates the currently selected menu item. Pressing CANCEL will return to the previous menu or exit command mode if the base menu is displayed.

Access Levels & Passcode Entry

Some commands may only be accessed after a passcode has been entered. Four access levels are defined, all except the default (level 0), are associated with a passcode.

When a command is selected, if the current access level is less than the level required, the system will prompt for the passcode:

Enter passcode :
_

The passcode can be defined as any combination of the numeric characters for a maximum length of 10 digits. There are three access levels available with passcode. The default passcode for access level 1 is 1111, access level 2 is 2222 and access level 3 is 3333.

The user gets three chances to enter a valid passcode. After the third failure, the command is aborted.

When command mode is exited, the access level reverts to default (level 0).

To change the passcode see Operation Menu section.

Error and Informational Messages

If an error is made during the command mode such as entering a wrong password or an invalid value for a device address an error message is displayed on the LCD for 10 seconds and the operator is given a chance to re-enter the value. The error message may be cancelled before the 10 seconds is up by pressing the CANCEL or ENTER keys. In case of wrong password just by re-entering keys user gets rid of the error message.

Informational messages such as those which are displayed to show that a password has been successfully changed are treated similarly except that CANCEL or ENTER returns to the previous menu which initiated the command.

Command Menu

The command menu is the first menu displayed for command mode. The command menu is divided into two main sub menu categories, the configuration allows full front panel configuration of the system and the operation menu

performs certain operations which may not be possible using the common control switches and indicators on the front panel.

---- Command Menu ----
1. Configuration
2. Operation

CONFIGURATION MENU

The configuration menu is divided into the following sub menu items:

---Configuration ---
1. Panel config .
2. Auto config .
3. Dflt. config .
4. Dialer config .
5. Time config .
6. Afthrs config .

CONFIGURATION MENU/PANEL CONFIGURATION

The panel configuration is further sub divided into the following sub menus:

---Panel config -----
1. Features
2. Devices
3. Correlation
4. Groups
5. Remote Sw

PANEL CONFIGURATION/1. FEATURES

The features described are the overall features of the system and their impact is system wide. The default setting in some features is shown as selected.

Panel Configuration/Features/Manual Signal Silence

Manual Signal Sil .
<input checked="" type="checkbox"/> Enabled

The manual signal silence option will allow silencing of the signal, from the common control signal silence switch, when they are active.

Panel Configuration/Features/Fire Drill

Fire Drill
<input checked="" type="checkbox"/> Enabled

This function is used to enable/disable fire drill operation from the fire common control fire drill switch at the front panel.

Panel Configuration/Features/Water-flow retard operation

Water-flow Retard
<input type="checkbox"/> Enabled

If disabled, all the initiating circuits configured as water-flow act as non-verified alarms. If enabled, retard operation is performed for initiating circuits configured as water-flow. Default is disabled.

Panel Configuration/Features/Auxiliary disconnect, disconnects alarm and supervisory relay

Aux Dis . Dis Alm & Spv
<input type="checkbox"/> Enabled

If enabled the auxiliary disconnect operation, disconnects alarm and supervisory relays disabled the auxiliary disconnect operation has no affect on the alarm and supervisory relays. Default is disabled.

Panel Configuration/Features/Signal silence inhibit timer

Sig-sil.inhibit tmr .
<input checked="" type="checkbox"/> Disabled
<input type="checkbox"/> 10 sec
<input type="checkbox"/> 20 sec
<input type="checkbox"/> 30 sec
<input type="checkbox"/> 1 min

Select the timer value for the signal silence inhibit timer

Panel Configuration/Features/Auto signal silence timer

Auto sig.sil. timer
<input checked="" type="checkbox"/> Disabled
<input type="checkbox"/> 5 min
<input type="checkbox"/> 10 min
<input type="checkbox"/> 15 min
<input type="checkbox"/> 20 min
<input type="checkbox"/> 30 min

Select timer value for the auto signal silence timer

Panel Configuration/Features/Number of remote annunciators

The screen will ask if the panel is an LCD or LED, then the following menu will show up for either.

No. of remote annun .
<input checked="" type="checkbox"/> None
<input type="checkbox"/> 1
<input type="checkbox"/> 2
<input type="checkbox"/> 3
<input type="checkbox"/> 4
<input type="checkbox"/> 5
<input type="checkbox"/> 6
<input type="checkbox"/> 7

Select number of remote annunciators.



Note: Addresses available for remote annunciators are 1 through to and including 7. Please note that the LED remote annunciators **MUST** have lower value addresses than any LCD remote annunciators.

Panel Configuration/Features/Alarm transmit silence

Alm. xmit. sil.
<input type="checkbox"/> Enabled

This feature allows the alarm transmits and auxiliary alarm relay to reset on “SIGNAL SILENCE” rather than the “RESET” switch if enabled. Default is disabled.

Panel Configuration/Features/Power fail timer

AC pwr.fail dly. tmr
<input checked="" type="checkbox"/> None
<input type="checkbox"/> 1 Hr
<input type="checkbox"/> 2 Hrs
<input type="checkbox"/> 3 Hrs

This feature allows a programmed delay before the AC fail trouble is transmitted by **the optional SPR-200**. (Note: the delay for transmission by the dialer is configured under Dialer Configuration – Item 4 –Time Parameters - AC Loss Delay)

Panel Configuration/Features/Common supervisory relay

Common supv . relay
<input type="checkbox"/> Enabled

This feature is used to make the common supervisory relay acts as a common alarm relay if enabled. Default is disabled

Panel Configuration/Features/Signal silence isolator

Sig. sil. isolator
<input type="checkbox"/> Enabled

This feature makes the system aware that the isolators are present on the main panel powered output circuits if enabled. Default is disabled.

Panel Configuration/Features/Strobe types

Strobes type
<input checked="" type="checkbox"/> Normal
<input type="checkbox"/> Gentex
<input type="checkbox"/> System Sensor
<input type="checkbox"/> Mircom
<input type="checkbox"/> Faraday
<input type="checkbox"/> wheelock

Select the strobe manufacturer for synchronous strobes. Synchronous strobes are driven by following a different ON/OFF pattern depending on the manufacturer's specification. Normal means the strobes are not synchronized and when the circuit gets active it is turned on steady. This feature applies to the main panel powered output circuits, configured as strobes, only.



Note: Once a specific type of strobe is selected, for example Mircom, then only this type of strobe is allowed for the entire system.

Panel Configuration/Features/Evacuation code

Evacuation code
<input type="checkbox"/> Continuous
<input type="checkbox"/> March Time
<input checked="" type="checkbox"/> Temporal
<input type="checkbox"/> California

Select the evacuation code for the 2nd stage in a two stage system and for the 1st stage in a single stage system.

Panel Configuration/Features/Monitor alert

Monitor alert
<input type="checkbox"/> Enabled

Alert sounds for monitor input activation. Default is disabled.

Panel Configuration/Features/Device LED flashing

Pooled dev . flashes
<input type="checkbox"/> Enabled

This feature allows flashing of the LED on the addressable sensors to flash momentarily, while polling, if enabled. The input and output modules LED always flashes, while polling, regardless of this feature enabled or disabled.

Panel Configuration/Features/Class-A loop

Loop class A
<input type="checkbox"/> Enabled

This feature configured the addressable loop as Class-A if enabled.

Panel Configuration/Features/Auto after hours

Auto after hours
<input type="checkbox"/> Enabled

This feature allows the daytime/nighttime mode to be set automatically if enabled.

Panel Configuration/Features/Two stage operation

Two stage operation
<input type="checkbox"/> Enabled

By default, the Two Stage operation is disabled, leave as is. The fire alarm panel should be set as single stage only.

Panel Configuration/Features/General alarm timer

Auto gen .alarm timer
<input checked="" type="checkbox"/> Disabled
<input type="checkbox"/> 5 min
<input type="checkbox"/> 10 min
<input type="checkbox"/> 15 min
<input type="checkbox"/> 20 min
<input type="checkbox"/> 30 min

This feature sets the value for the general alarm timer

Panel Configuration/Features/Common alarm relay operation

Common alm rly . oper
<input type="checkbox"/> Both stages
<input checked="" type="checkbox"/> Second stage

This feature sets the operation of the common alarm for two stage system.

Panel Configuration/Features/Agency selection

Jurisdiction
<input type="checkbox"/> ULI
<input checked="" type="checkbox"/> ULC

This feature selects the agency having jurisdiction for the panel. Select **ULI** for SFC-500 Series Fire Alarm panels.

PANEL CONFIGURATION/2. DEVICES CONFIGURATION

The device configuration is divided into 6 sub menu items. The user is asked to enter the loop number and the device address to proceed with the device configuration.

Device address
Loop :__ DevAddr :__

Use # key to move to the Device Address position.

If the device is not already configured the next screen will prompt the user for adding the new device

Add Circuit ?Y/N

After the confirmation the following options are available for configuring a device.

----- Devices -----
1. Device type
2. Sensitivity
3. Process type
4. Silence -able
5. Second stage
6. Label

Panel Configuration/Devices/1. Device type

The following selection is available for the devices. This selection includes both the input and output devices.

----Device type ----
1. Ion
2. Photo
3. Thermal
4. Multisensor
5. Contact
6. Contact mini
7. Spv . Opt.
8. Relay



Note: Addressable Pull Stations should be selected as Contact Mini device types, Monitor Modules as Contact devices and Mini Monitor Modules as Contact Mini.

Panel Configuration/Devices/2. Sensitivity

Sensitivity
1. Normal
2. off hours

This option will set the sensitivity for the ion and photo for the normal and off-hours time. The sensitivity of the sensors can be set to full range depending upon the agency selection.

If ULI is selected, the following range of sensitivity in %/ft obscurity is available for both the normal and off-hours times: I

Sensor	ULI
Ion	0.6 to 1.3% per foot obscurity
Photo	1.8 to 3.4% per foot obscurity
Multi-sensor	0.7 to 4.0% per foot obscurity
Thermal	55 (135F) to 90 (200F) degrees centigrade

For example the obscurity level is set for a photoelectric sensor below:

----- Normal -----
3.4 %/ft obsc

-----Off hours -----
3.0 %/ft obsc

Use the UP/DOWN key for scrolling the values. The range of values is ULI minimum to ULI maximum.

Thermal sensor sensitivity does not depend on the drift compensation algorithm or agency selection. The full range of temperature in degree Celsius as specified by the manufacturer is available.

-----Normal -----
55 degree C

-----Off hours -----
55 degree C

Heat sensors can also be set to activate at a fixed 8.33 degrees Celsius per minute rate of rise of temperature.

----Rate of rise ---
[] Yes
[X] No

By selecting 'Yes' the detector will activate at a fixed rate of rise temperature of 8.33 degree C/min

Panel Configuration/Devices/3. Process type

The following selections are available for the process type. Choose according to device type. The following is the list of process types for addressable sensors which are **items 1 to 4 in the device type menu**.

--- Process Type ---
1. Alarm ver.
2. Alarm non-ver.
3. Spv latch
4. Spv nlatch
5. Trouble
6. Monitor

The following is the list of process types for input modules which are **items 5 and 6 in the device type menu**.

--- Process Type ---
1. Alarm nver
2. Spv latch
3. Spv nlatch
4. waterflow
5. Trouble
6. Monitor
7. Rem Swi

The following is the list of process types for output modules which are **items 7 and 8 in the device type menu**.

---- Process type ---
1. Signal
2. Strobe
3. Relay



Note: If Strobe is selected as the process type, make sure the proper strobe type is selected under the Panel Configuration Features Menu.

Panel Configuration/Devices/4. Silenceable

Silence -able? [N]

This option allows configuring the circuit as silenceable or non-silenceable.

Panel Configuration/Devices/5. Second Stage

Second stage? [N]

If configured as YES the input circuit will activate the second stage and the general alarm is activated

Panel Configuration/Devices/6. Label

Label? [Y]

If yes, then enter the label

Enter new name...
-

This option allows affixing a label of a maximum of 20 characters to any device. This label is displayed on the shared display when the device gets active or in trouble.

PANEL CONFIGURATION/3. CORRELATION

The user is prompted to enter the loop number and address of the device to be correlated

Ipt Dev Loop # & Addr
Loop :__ DevAddr :__

A list of all the output devices is then displayed showing the correlation to the input device or an empty list.

Correlation
LP:01 ADDR:004
LP:01 ADDR:006
LP:01 ADDR:008

The user can press RIGHT arrow key to add and LEFT arrow key to delete an output device. When a user deleted a device after the confirmation, the group is deleted and the list is updated. To add a device the user is prompted for confirmation as shown below

Add Correlation
Yes/No

After the confirmation the user is prompted for entering the output device. The circuits are recognized by the Loop# and the device address as shown below

Opt Dev Loop # & Addr
Loop :__ DevAddr :__

After the device is added the list is updated and the user can add more devices to the list or press the CANCEL key to go back to the previous menu.

PANEL CONFIGURATION/4. GROUPS

----- Groups -----
1. Led Groups
2. Rem Led Groups
3. Bypass Groups

Panel Configuration/Groups/1. LED Groups

This feature is not available on this fire alarm, leave default as is.

---- LED Groups ----
No LED groups

Panel Configuration/Groups/2. Remote LED Groups

Remote LED groups are used to map the remote LED annunciator's LEDs to a group of input and/or output circuits. There is a maximum of 200 LED zones available that can be mapped to remote LED groups and the maximum number of remote LED groups that can be created is 130.



Note: When using an SSR-212 Smart Relay module, the relays **must** be mapped to the first 12 (or less if not using all the relays) remote LEDs.

The remote LED zone mapping is carried out by creating a group of either input or output circuits with the same basic process type of alarm, supervisory, trouble, monitor and signal. The group is then assigned to an LED zone on the remote LED annunciator.

The mapping is duplicated to multiple LED annunciators if added.

If there are no Remote LED groups configured the following message is displayed.

---Rem LED Groups --
No Rem LED groups

If there are Remote LED groups already configured the list of all the configured groups is shown in the following format.

--Rem LED Groups--
Rem LED Floor A
Rem LED Floor B
Rem LED Floor C

There is label associated with each remote LED group and the groups are solely recognized by its label, such as "Floor A".

The user can press RIGHT arrow key to add and LEFT arrow key to delete a group. When a user deleted a group after the confirmation, the group is deleted and the list is updated. When the user adds a group an empty group is created with group type defaulted as alarm

To configure a remote LED group the user can press the ENTER key with the group selected on the second line of the display. The following options are available to configure a remote LED group.

---- LED Groups ----
1 . Type
2 . Group members
3 . Led map
4 . Label

Here the basic process type of the group is selected and if the group is selected of a certain process type then only circuits with that process type can be added to the group. The following list shows the type of the group that can be selected. Item 1 to 4 is dedicated to input circuits and the item 5 is dedicated to output circuits.

----- Type -----
1 . Alarm
2 . Supervisory
3 . Monitor
4 . Trouble
5 . Signal
6 . Relay

Selecting the group members shows the list of all the group members of the group. The members/circuits are recognized by the Loop# and the device address

---Group members ---
Lp:01 DevAddr :006
Lp:01 DevAddr :008
Lp:01 DevAddr :010

The user can press RIGHT arrow key to add and LEFT arrow key to delete a group member. When a user deleted a group member after the confirmation, the group member is deleted and the list is updated. When the user adds a group member the user is prompted to add a member/circuit.

Dev Loop # & Addr
Loop :__ DevAddr :__

After the circuit is added the list is updated and re-displayed on the shared display

Selecting LED map will allow the user to assign the group a zone LED on the remote LED annunciator. LEDs are numbered from 1 to 200. The user is prompted to enter the zone LED no as shown below.

----- Led map -----
Zone Led No :__

Panel Configuration/Groups/3. Bypass Groups

Bypass groups are used to bypass a group of circuits, input circuits, output circuits or a combination, by using control command using the shared display and the keypad.

The bypass groups cannot be mapped to remote LED annunciator zone LEDs. Associated LEDs are not mandatory and are not available with this fire alarm panel.

If there are no bypass groups configured the following message is displayed.

---Bypass groups ---
No bypass groups

If there are bypass groups already configured the list of all the configured groups is shown in the following format.

--- Bypass groups--
1. Bypass Floor A
2. Bypass Floor B
3. Bypass Floor C

There is a label associated with each bypass groups and the groups are solely recognized by its label, such as "Floor A". Fourteen characters are allowed for each label.

The user can press RIGHT arrow key to add and LEFT arrow key to delete a group. When a user deleted a group after the confirmation, the group is deleted and the list is updated. When the user adds a group an empty group is created.

To configure a bypass group the user can press the ENTER key with the group selected on the second line of the display. The following options are available to configure a bypass group.

--- Bypass groups ---
1 . Input circuits
2 . Output circuits
3 . Led map
4 . Label

Selecting the input circuits shows the list of all the input circuits of the group. The circuits are recognized by the Loop# and the device address as shown below

---Input circuits ---
Lp:01 DevAddr :006
Lp:01 DevAddr :008
Lp:01 DevAddr :010

The user can press RIGHT arrow key to add and LEFT arrow key to delete an input circuit. When a user deleted an input circuit after the confirmation, the circuit is deleted and the list is updated. When the user adds an input circuit the user is prompted to add an input circuit.

Ipt Dev Loop # & Addr
Loop :__ DevAddr :__

After the circuit is added the list is updated and re-displayed on the shared display

Selecting the output circuits shows the list of all the output circuits of the group. The circuits are recognized by the Loop# and the device address as shown below

--Output circuits ---
Lp:01 DevAddr :006
Lp:01 DevAddr :008
Lp:01 DevAddr :010

The user can press RIGHT arrow key to add and LEFT arrow key to delete an output circuit. When a user deleted an output circuit, after the confirmation, the circuit is deleted and the list is updated. When the user adds an output circuit the user is prompted to add an output circuit.

Opt Dev Loop # & Addr
Loop :__ DevAddr :__

After the circuit is added the list is updated and re-displayed on the shared display

The LED map option will be unavailable for this fire alarm.



Note: Associating a bypass group to an LED is not mandatory. Check with the local AHJ.

PANEL CONFIGURATION/5. REMOTE SWITCHES

Remote switch configuration allows the user to associate any input, configured as remote switch, to be associated with the following common control switches.

--Remote switches --
1. System reset
2. Fire Drill
3. Aux disconnect
4. Buzzer silence
5. Signal silence
6. Acknowledge
7. General Alarm



Note: The Acknowledge switch is not applicable for a single stage system.

Selecting system reset will display the following message if there is no input circuit associated with the switch

---System reset ----
empty

If there is input circuit(s) associated with the system reset the list of the associated input circuits is displayed. The

circuits are recognized by the Loop# and the device address as shown below

---System reset ----
Lp:01 DevAddr :006
Lp:01 DevAddr :008
Lp:01 DevAddr :010

The user can press RIGHT arrow key to add and LEFT arrow key to delete an input circuit. When a user deleted an input circuit, after the confirmation, the circuit is deleted and the list is updated. When the user adds an input circuit the user is prompted to add an input circuit.

Ipt Dev Loop # & Addr
Loop :__ DevAddr :__

The operation is true for all the common control switches except that the switches are different.

CONFIGURATION MENU/2. AUTO CONFIGURATION

Auto configuration automatically detects devices and their addresses, if no changes are found during the scan of the loop the following message is displayed

No changes found .
Auto program aborted

If new devices are found on the loop the user is prompted for the fact and prompt for confirmation to add the new devices as shown below

XXX new device (s)
found on loop . Add?

If the devices are missing

Xxx device (s) are
Missing . Delete ?Y

If finds different device types from original but still compatible

Xx device (s) on lp:x
chgd .update type ?Y

If finds different device types from original and not compatible

Xx device (s) on lp:x
chgd . Delete & add?Y

A warning message is displayed if the configuration is changed before continuing

Sys must be rechked
when done !continue ?Y

The following message is displayed while the auto programming is in progress.

Auto Programming
In process

CONFIGURATION MENU/3. DEFAULT CONFIGURATION

This option will load the default configuration in the system. The user is prompted for confirmation

Load the default
Settings ?Y/N

After the default settings are loaded the following is displayed for confirmation.

Default settings
have been loaded .

CONFIGURATION MENU/4. DIALER CONFIGURATION

The dialer configuration is divided into 6 sub menus

--Dialer config --
1. Account Info
2. Telephone line
3. Report Options
4. Time parameter
5. Enable/Disable
6. Ring Detect

Configuration Menu/Dialer Config/1. Account Info

--Account Info --
1. Account #1 ID
2. Account #1 Tel
3. Accnt #1 format
4. Account #2 ID
5. Account #2 Tel
6. Accnt #2 format

Configuration Menu/Dialer Config/Account Info/1. Account#1 ID

Account #1 ID
123456

Set the Account ID for the monitoring station to which the dialer reports events, the maximum # of digits allowed for SIA protocol is 6 and for contact ID protocol is 4. For SIA protocol the allowed digits are simple 0 to 9 while for contact ID the hexadecimal digits are used i.e. fro 0-9 and A to F. To enter hexadecimal digits, press the INFO button. The letter "A" will appear press the INFO key again to scroll through the rest of the letters, to move the cursor forward press # or press * to move it backward. The default account ID is "123456"

Configuration Menu/Dialer Config/Account Info/2. Account#1 Telnum

Account #1 Telnum :
101

Sets the telephone number of the monitoring station, the maximum # of digits allowed is 19 including ",", and numerals. The "," will be treated as 1 sec delay. To enter ',' press MENU key, to move the cursor forward use '#' key and to move the cursor backward use the '*' key. An example of a typical telephone # is 9,,1234567. The default phone number is "101"

Configuration Menu/Dialer Config/Account Info/3. Account#1 format

Accnt #1 format
[X] Contact ID
[] SIA 300 baud
[] SIA 110 baud

Set the reporting format that is recognized or preferred by the monitoring station.

Configuration Menu/Dialer Config/Account Info/4. Account#2 ID

Account #2 ID
654321

Set the Account ID for the monitoring station to which the dialer reports events, the maximum # of digits allowed for SIA protocol is 6 and for contact ID protocol is 4. For SIA protocol the allowed digits are simple 0 to 9 while for contact ID the hexadecimal digits are used i.e. fro 0-9 and A to F. To enter hexadecimal digits, press the INFO button. The letter "A" will appear press the INFO key again to scroll through the rest of the letters, to move the cursor forward press # or press * to move it backward. The default account ID is "123456"

Configuration Menu/Dialer Config/Account Info/5. Account#2 Telnum

Account #2 Telnum :
101

Sets the telephone number of the monitoring station, the maximum # of digits allowed is 19 including "," and numerals. The "," will be treated as 1 sec delay. To enter ',' press MENU key, to move the cursor forward use '#' key and to move the cursor backward use the '*' key. An example of a typical telephone # is 9,,1234567. The default phone number is "101"

Configuration Menu/Dialer Config/Account Info/6. Account#2 format

Accnt#2 format
<input checked="" type="checkbox"/> Contact ID
<input type="checkbox"/> SIA 300 baud
<input type="checkbox"/> SIA 110 baud

Set the reporting format that is recognized or preferred by the monitoring station.

Configuration Menu/Dialer Configuration/2. Telephone Line

--Telephone Line --
1. Line1 dialtype
2. Line2 dialtype
3. Line1 dialtone
4. Line2 dialtone
5. No of retries

Configuration Menu/Dialer Configuration/Telephone line/1. Line 1 dialtype

Line1 dialing type :
<input checked="" type="checkbox"/> DTMF dial
<input type="checkbox"/> Pulse dial

Sets the dialing type for the phone line# 1

Configuration Menu/Dialer Configuration/Telephone line/2. Line 2 dialtype

Same as line 1

Configuration Menu/Dialer Configuration/Telephone line/3. Line 1 dialtone

Line#1 wait dialtone
<input checked="" type="checkbox"/> Enable
<input type="checkbox"/> Disable

Use this function to let the system know whether or not to wait for a dial tone before dialing. Cell phone set-up for the dialer requires that the system not wait for dial tone before dialing.

Configuration Menu/Dialer Configuration/Telephone line/4. Line2 wait dialtone

Same as line 1

Configuration Menu/Dialer Configuration/Telephone line/5. Number of retries

No of retries
06

Set the number of retries for both line#1 and line#2. This function lets the dialer retry on either line if it is busy or not available. If the retry count expires, the panel reports a line trouble.

Configuration Menu/Dialer Configuration/3. Report Options

---Report options --
1. Alarm prio
2. Trouble prio
3. Supv. prio
4. Aux. dis. report
5. Operation mode

Configuration Menu/Dialer Configuration/Report Options/1. Alarm priority

Alarm priority :
<input checked="" type="checkbox"/> Account 1
<input type="checkbox"/> Account 2

Use this function to set the account priority for reporting alarms. If the priority is set for account#1 then the dialer will try account#1 first for reporting.

Configuration Menu/Dialer Configuration/Report Options/2. Trouble priority

Trouble priority :
<input checked="" type="checkbox"/> Account 1
<input type="checkbox"/> Account 2

Use this function to set the account priority for reporting troubles. If the priority is set for account#1 then the dialer will try account#1 first for reporting.

Configuration Menu/Dialer Configuration/Report Options/3. Supervisory priority

Supv. priority :
<input checked="" type="checkbox"/> Account 1
<input type="checkbox"/> Account 2

Use this function to set the account priority for reporting supervisory. If the priority is set for account#1 then the dialer will try account#1 first for reporting.

Configuration Menu/Dialer Configuration/Report Options/4. Auxiliary Disconnect/Supervisory Report

Auxiliary disconnect cancels alarm & supervisory reporting through dialer

AuxDis Alm /Supv Rpt .
<input checked="" type="checkbox"/> Disable
<input type="checkbox"/> Enable

If this function is enabled, the auxiliary disconnect will block the alarm and supervisory events from being reported through the dialer.

Configuration Menu/Dialer Configuration/Report Options/5. Dialer Operation Mode

Dialer oper mode
<input checked="" type="checkbox"/> (U) DACT
<input type="checkbox"/> DACT

Use this function to select the functionality of the dialer. In DACT mode only common trouble/alarm/supervisory are reported while in UDACT mode all point information is reported

Configuration Menu/Dialer Configuration/4. Time Parameters

Time parameters
1. AC loss delay
2. Cell phone date
3. Auto test time

Configuration Menu/Dialer Configuration/Time Parameter/1. AC Loss delay

AC Loss delay (hrs)
0

Use this function to delay the reporting of AC loss trouble on the dialer for the programmed time period. (Note: the PR-300 delay is configured separately. See Features Item 10 - Power Fail Timer.)

Configuration Menu/Dialer Configuration/Time Parameters/2. Cell phone date

Cellular report date
0

Use this function to set the test report date for the cell phone line reporting. If the date is set to 0, this means there is no test reporting for cell phone or the phone line is a regular line. Other settings could be anywhere from 01-28, representing which day of the month the test should be performed. When a cell phone service is employed for the panel, it should only be connected to telephone line #2 CO interface also, the dial tone detection feature of Line #2 should be disabled for cell phone application.

Configuration Menu/Dialer Configuration/Time Parameters/3. Auto test time

Auto test (HH:MM)
00:30

Use this function to set the time for auto test. This test has to be performed once a day to send the test report to the monitoring station. The time is in 24hr format, which means 00:30 is 30 minutes after midnight.

Note: Do not use the following test times: 00:00, 01:55, 02:00 and 03:00

Configuration Menu/Dialer Configuration/5. Enable/Disable dialer

Dialer Dis /Ena
<input checked="" type="checkbox"/> Enable
<input type="checkbox"/> Disable

The dialer is enabled by default. When the dialer is enabled or disabled, a warning message appears.

-----warning-----
Dialer disabled !!!

Note: The dialer cannot report any event to the monitoring station if it is disabled.

Configuration Menu/Dialer Configuration/6. Ring Detect

--Ring detect no --
[] Disabled
[] 1
[] 2
[] 3
[] 4
[X] 5
[] 6
[] 7
[] 8

Use this menu item to select the number of rings on which the panel's modem will answer. The default number of rings is five. The maximum number of rings you can define is eight. If you select the "Disabled" option, the modem will be disabled and the panel will not pick up the incoming call.

CONFIGURATION MENU/5. TIME CONFIGURATION

Time configuration allows to set the daylight time saving mode and to set the appropriate compensation for the time drift in real time clock

Time clock config
1. Daylight save
2. Compensation

1. Daylight saving mode can be enabled or disabled

Daylight saving
[] Enable

2. Daily compensation can be from -15 to +15 seconds and is applied at the midnight every day. Select the compensation value by scrolling up and down using the UP and DOWN keys.

Daily Compensation
Seconds :00

CONFIGURATION MENU/6. AFTER HOURS TIME CONFIGURATION

After hours duration for which the panel is in after hours mode can be entered in the following three ways

Afthrs config
1. Set night time
2. Set weekends
3. Set holidays

1. For weekdays the user is prompted to enter the start time and the end time for which the panel is in off-hours mode.

Night time start
Time : 06:00 PM

Night time end
Time : 08:59 AM

2. For weekends (Saturday and Sunday) the user is prompted to enter the start time and the end time for which the panel is in off-hours mode.

weekend start
Time : 06:00 PM

weekend end
Time : 08:59 AM

- For holidays, a list of holidays is show, the user can press RIGHT key to add and LEFT key to delete the holidays or can press ENTER to edit the holiday.

Holidays
JAN 01, YYYY
JUL 01, YYYY
DEC 25, YYYY

For example to add a holiday for July 4th for every year, set the start date leave the year as YYYY

Holiday start
Date: Jul 04, YYYY

Set the end date which is the next day if the holiday is for one day only, leave the year as YYYY

Holiday end
Date: Jul 05, YYYY

To add a holiday for May 1st for 2006 only, set the date including the year

Holiday start
Date: May 01, 2006

Set the end date which is one day after the holiday including the year

Holiday end
Date: May 02, 2006

Enable the every year option, so the holiday is applied to every year

Every year ?
<input checked="" type="checkbox"/> Enable

Multiple day holidays can also be entered by entering the appropriate start and end date.

OPERATION MENU

The operation menu is divided into the following sub menu items

---Operation Menu ---
1. Set Time
2. Set password
3. Reports
4. Clear logs
5. walk test
6. Bypass
7. Aux. disc.
8. Test Dialer
9. After hours
10. Clear veri cnts
11. Exit

OPERATION MENU/1. SET TIME

Date: Oct 08, 2005
Time: 10:00 PM

Set the current date and time for the panel. Use the '#' key to move the cursor forward and the UP and DOWN key to change the date/time parameters.

OPERATION MENU/2. SET PASSWORD

This menu is used to set the password for all three access levels. For changing a specific level of password the password required is the equivalent level or higher level.

The user is prompted to enter the access level for which the password needs to be changed.

Access Level :1

The user is then prompted to enter the current access level or higher level password. The maximum number of digits allowed is 10.

Enter password

If the password is not right the user is given three chances to enter the correct password and during this time an invalid password message is display to prompt the user the password is not right. After the three failed tries the display falls back to the main operation menu.

Invalid password

If the password is right the user is prompted to enter the new password.

Enter new password

To confirm the password the user is prompted to re-enter the password again

Re-enter password

OPERATION MENU/3. REPORTS

Reports can be displayed on the shared display for the following items

Report Menu
1. Alarm Log
2. Event Log
3. Current levels
4. Verif Counts
5. Maint Report

Operation Menu/Reports/1. Alarm log

Nverf alm ipt
Active 002/016

The alarm logs are displayed in the above format, pressing the INFO key shows additional information about the log.

Lp:1 Addr:002
Jul 20, 2005 09:25AM

Operation Menu/Reports/2. Event logs

Event log(s) has the same format as alarm log

Operation Menu/Reports/3. Current level

The user is prompted to enter the loop no of the device to which it is connected.

Loop Number
Loop :__

The current level and the percentage alarm is shown in the following format.

Lp:1 Addr :001
Levl :0024 Alarm :000%

The user can press UP and DOWN key to scroll through all the analog devices on the loop. If there are no analog devices on the loop the following message will be displayed.

No analog devices
found

Operation Menu/Reports/4. Verify counts

The user is prompted to enter the loop no of the device to which it is connected.

Loop Number
Loop :__

The verify count is shown in the following format.

Lp:1 Addr :001
Verify count :000

The user can press UP and DOWN key to scroll through all the devices on the loop for which the verify count is available. If there are no verified devices on the loop the following message will be displayed.

No verified devices
found

Operation Menu/Reports/5. Maintenance report

The user is prompted to enter the loop no of the device to which it is connected.

Loop Number
Loop :__

The maintenance report is shown in the following format.

Maint Report
Percent dirty :012%

The user can press UP and DOWN key to scroll through all the devices on the loop for which the maintenance report is available. If there are no dirty devices on the loop the following message will be displayed

No dirty devices found

OPERATION MENU/4. CLEAR LOGS

Clears the logs stored in the flash memory

Select Log
1. Alarm Log
2. General Log
3. All Logs

The options are to clear only the alarm logs, event logs or all the logs. The user is prompted for confirmation

Clear all the selected log (s)?Y/N

After confirmation the logs are cleared and the following information message is displayed.

Log(s) cleared

OPERATION MENU/5. WALK TEST

Selecting Walk Test on the command menu allows the user to initiate a silent or audible Walk Test. The user is prompted to select the audible or silent walk test.

Select Test Type
1. Audible Test
2. Silent Test

After the user makes a selection the following message will show the walk test initializing.

Initializing walk test ...

Entering walk test, places the system in trouble. The trouble is non-latching and is cleared when walk test is exited. Walk test is aborted by pressing the Cancel button. It will also be aborted if there no circuit activations are detected for one hour. The walk test status is active during walk test. If the walk test is an audible test, the audible walk test status is also set.

If the test is identified as "audible", activation of any input will activate all signals for half a second. Trouble on any input causes the signals to be activated continuously for 5 seconds. After the code is transmitted, the input is then reset (if it is resettable) and then tested again. If it is still in alarm or trouble the code will be re-transmitted.

Zone indicators, including the Smart Relay Module (SRM-312) function normally during the test, displaying the input status when it is activated. Relay and signal correlations to input circuits are not processed during walk-test. Correlations to system status will still be processed.

All common controls and keys not explicitly required for the walk-test operation are disabled while the walk-test is active. The alarm verification and waterflow retard operation is disabled on inputs during walk-test.

While the walk-test is active the following message is displayed on the screen:

```
--walk test Active --
Alarm : nnn Trbs : mmm
```

where nnn and mmm is a continuously updated count of the number of alarms and troubles which have been recorded during the test (alarms includes all input circuit types tested).



Note: Each event during the Walk Test is also recorded in the log. Therefore, any event past the 200 count will clear the log and be entered as event 1 and so on.

OPERATION MENU/6. BYPASS

The bypass operation has the following options

```
-Bypass Menu-
1. Device/Circuit
2. Group
3. Loop
4. List Bypass
5. List Un-Bypass
```

Operation Menu/Bypass/1. Device/Circuit

Individual circuit can be bypassed using this option. The user is prompted for the device's loop# and the device address to be bypassed

```
Dev Loop # & Addr
Loop :__ DevAddr :__
```

If the device is not bypassed the user is prompted to bypass the circuit.

```
Device not bypassed
Bypass ?Y/N
```

After the confirmation the device is bypassed and the information message is appeared that the device is bypassed.

```
Device /circuit
Bypassed
```

If the device is already bypassed the user is prompted to un-bypass the circuit

```
Device now bypassed
Unbypass ?Y/N
```

After the confirmation the device is un-bypassed and the information message is appeared that the device is un-bypassed.

```
Device /circuit
Unbypassed
```

Operation Menu/Bypass/2. Groups

Configured bypass groups can be bypassed using this option. The list of all the configured bypass groups is displayed and the user can select which group to bypass

--- Bypass groups--
1. Bypass Floor A
2. Bypass Floor B
3. Bypass Floor C

If the group is not bypassed the user is prompted to bypass the group

Group not bypassed
Bypass? Y/N

After the confirmation the group is bypassed and the information message is appeared that the group is bypassed.

Group
Bypassed

If the group is already bypassed the user is prompted to un-bypass the group

Group not bypassed
Unbypass? Y/N

After the confirmation the group is un-bypassed and the information message is appeared that the group is un-bypassed.

Group
Unbypassed

Operation Menu/Bypass/3. Loop

The whole loop either conventional or addressable can be bypassed using this option. The user is prompted to enter the loop number to be bypassed.

Loop number
Loop :__

If the loop is not bypassed the user is prompted to bypass the loop

Loop 0 not bypassed
Bypass ?Y/N

After the confirmation the loop is bypassed and the information message is that the loop is bypassed.

Loop
Bypassed

If the loop is already bypassed the user is prompted to un-bypass the loop

Loop 0 is bypassed
Unbypass ?Y/N

After the confirmation the loop is un-bypassed and the information message is appeared that the loop is un-bypassed.

Loop
Unbypassed

Operation Menu/Bypass/4. List Bypass

A list of devices may be bypassed using this option. The user is prompted to enter the loop number associated with these devices.

Loop number
Loop :__

Next enter the address list of devices you wish to bypass. Use the following symbols to enter the address list:

Comma (press key number 1 three times)	Use to separate the addresses of the devices
Dash (press key number 1 two times)	Use dash for interval of consecutive addresses, e.g. 1-7.
Exclamation (press key number 1 four times)	Placed at the end of list to signify that no individual confirmation is required.

```
Enter bypass list...
xxxxxxxxxxxxxxxx
```

The message displayed if the current address carries no device is as follows:

```
Lp:x Addr:xxx
Empty Address
```

The following message is displayed to bypass.

```
Lp:x Addr:xxx
Bypass? Y/N
```

The following message is displayed to bypass.

```
Lp:x Addr:xxx
Bypass? Y/N
```

If the device is already bypassed the message is as follows.

```
Lp:x Addr:xxx
Already Bypassed
```

If the exclamation is not used, then there will be individual confirmation.

```
Device/circuit
bypassed
```

At the end of the bypass operation or if the exclamation is used, the message will be . . .

```
Done...
```

Operation Menu/Bypass/5. List Unbypass

A list can be bypassed using this option. The user is prompted to enter the loop number to be unbypassed.

```
Loop number
Loop :__
```

Enter the list to unbypass, the last list bypassed will be displayed.

```
Enter bypass list...
xxxxxxxxxxxxxxxx
```

If the list to be unbypassed is shown, just press Enter to complete the unbypassing. Otherwise, you may unbypass the devices one, two or more at a time.

```
Lp: x Addr: xxx
Un-bypass? Y/ N
```

If you are attempting to unbypass items that are already unbypassed you will get an “Already un-bypassed” message.

```
Lp: x Addr: xxx
Already un-bypassed
```

Otherwise, if the exclamation is not used, then there will be individual confirmation.

Device/ circuit
Un-bypassed

At the end of the un-bypass operation or if the exclamation is used, the message will be...

Done...

OPERATION MENU/7. AUX DISC

The auxiliary disconnect operation is performed by the following the steps below. If the auxiliary relays are connected the user is prompted to disconnect the relays.

Aux relays connected
Disconnect ?Y/N

After the confirmation the auxiliary relays are disconnected and the information message is displayed that the auxiliary relays are disconnected.

Aux relays
disconnected

If the auxiliary relays are already disconnected the user is prompted to reconnect the relays.

Aux rly disconnected
Reconnect ?Y/N

After the confirmation the auxiliary relays are reconnected and the information message is displayed that the auxiliary relays are reconnected.

Aux relays
Reconnected

OPERATION MENU/8. TEST DIALER

Special function is provided to test the dialer operation. This function can manually test both the phone line L1 and L2 and also reset the dialer where all the events to be reported in the queue are cleared and the dialer status is reset.

---Dialer test ----
1. L#1 manual test
2. L#2 manual test
3. Reset dialer

OPERATION MENU/9. AFTER HOURS

This operation allows to manually set the daytime or the night time mode of operation thus over-riding the current daytime or nighttime mode. The user is prompted for confirmation as shown below:

Manual night mode
Change ?Y/N

After the confirmation the user is prompted to enter which mode to be set.

Select mode
1. Daytime
2. Night time

After the user selection and information message is displayed that the daytime nighttime mode is updated.

Day/night mode
updated

OPERATION MENU/10. CLEAR VERIFY COUNT

This operation is used to clear all the verification counts accumulated during the alarm verification process. The user is prompted for confirmation as shown below:

Clear all verif
Counters ?Y/N

After the confirmation the verification count is cleared and the information message is displayed that the counts are cleared.

Verify
Counters cleared

OPERATION MENU/11. EXIT

Exit to the main command menu.

Reports

Overview

Reports can be generated in command mode from the reports menu. Reports are shown on the shared LCD display in a special format.

Alarm Log

The alarm log report displays the contents of the alarm event log on the shared display which contains the last 400 of any of the following events:

- activation of any alarm input or common control which activates the common alarm sequence
- activation of system reset
- clearing of the event log (as the first entry)

Each entry contains the time and date of the event and a description of what the event was, for example:

Nverf alm ipt
Active 002/016

For input circuits the first line shows the programmed message, the second line shows the status of the circuit and the position of the event in the queue along with the total number of events in the queue.

By pressing the INFO key gives the following additional information

Lp:1 Addr : 002
Jul 20, 2005 09 :25AM

The first line show the loop# and the address, the second line shows the date and time when the event has occurred.

Other events are displayed in the same format with information applicable to that event only.

General Event Log

The general event log report displays the contents of the general event log on the shared display which contains the last 400 of any of the following events:

- activations of any input circuits
- restoral of non-latching input circuits
- pre-alarm on any device
- initiation of the alarm verification sequence on a verified alarm input
- any system troubles

- activation of any system common control or any command on the command menu

The report format is similar to the alarm log report.

Current Levels Report

The current levels report displays the current alarm level for analog devices on the specified loop as a percent of alarm as well as its current raw analog reading.

The display shows the loop#, device address, current level and the %alarm in the following format:

Lp:1 Addr :001
Levl :0024 Alarm :000%

If no analog devices are found on the specified loop(s), a message is displayed to that effect.

Verification Count Report

The verification count report displays the number of times that the alarm verification cycle has been initiated without causing an alarm for all verified device or circuits on the specified loop or loops. If the count is zero, the device is not displayed.

The report shows the loop#, device address and count in the following format:

Lp:1 Addr :001
Verify count :000

If no verified devices with a non-zero counter are found on the specified loop(s), a message is displayed to that effect.

Verification counters are cleared by the clear verification count command and at initial power-up.

Maintenance Report

The maintenance report displays all detectors on the specified loop or loops that are currently reading dirty or almost dirty. Almost dirty is defined as more than 75% of the dirty level. Dirty detectors are displayed first followed by the almost dirty. The two parts are separated by a sub heading.

The report shows the device address, percentage dirty, device type, and programmed message in the following format:

Maint Report
Percent dirty :012%

If no dirty or almost dirty devices are found on the specified loop(s), a message is displayed to that effect.

Warranty & Warning Information

Warning Please Read Carefully

Note to End Users: This equipment is subject to terms and conditions of sale as follows:

Note to Installers

This warning contains vital information. As the only individual in contact with system users, it is your responsibility to bring each item in this warning to the attention of the users of this system. Failure to properly inform system end-users of the circumstances in which the system might fail may result in over-reliance upon the system. As a result, it is imperative that you properly inform each customer for whom you install the system of the possible forms of failure.

System Failures

This system has been carefully designed to be as effective as possible. There are circumstances, such as fire or other types of emergencies where it may not provide protection. Alarm systems of any type may be compromised deliberately or may fail to operate as expected for a variety of reasons. Some reasons for system failure include:

•*Inadequate Installation*

A Fire Alarm system must be installed in accordance with all the applicable codes and standards in order to provide adequate protection. An inspection and approval of the initial installation, or, after any changes to the system, must be conducted by the Local Authority Having Jurisdiction. Such inspections ensure installation has been carried out properly.

•*Power Failure*

Control units, smoke detectors and many other connected devices require an adequate power supply for proper operation. If the system or any device connected to the system operates from batteries, it is possible for the batteries to fail. Even if the batteries have not failed, they must be fully charged, in good condition and installed correctly. If a device operates only by AC power, any interruption, however brief, will render that device inoperative while it does not have power. Power interruptions of any length are often accompanied by voltage fluctuations which may damage electronic equipment such as a fire alarm system. After a power interruption has occurred, immediately conduct a complete system test to ensure that the system operates as intended.

•*Failure of Replaceable Batteries*

Systems with wireless transmitters have been designed to provide several years of battery life under normal conditions. The expected battery life is a function of the device environment, usage and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life. While each transmitting device has a low battery monitor which identifies when the batteries need to be replaced, this monitor may fail to operate as expected. Regular testing and maintenance will keep the system in good operating condition.

•*Compromise of Radio Frequency (Wireless) Devices*

Signals may not reach the receiver under all circumstances which could include metal objects placed on or near the radio path or deliberate jamming or other inadvertent radio signal interference.

•*System Users*

A user may not be able to operate a panic or emergency switch possibly due to permanent or temporary physical disability, inability to reach the device in time, or unfamiliarity with the correct operation. It is important that all system users be trained in the correct operation of the alarm system and that they know how to respond when the system indicates an alarm.

•*Automatic Alarm Initiating Devices*

Smoke detectors, heat detectors and other alarm initiating devices that are a part of this system may not properly detect a fire condition or signal the control panel to alert occupants of a fire condition for a number of reasons, such as: the smoke detectors or heat detector may have been improperly installed or positioned; smoke or heat may not be able to reach the alarm initiating device, such as when the fire is in a chimney, walls or roofs, or on the other side

of closed doors; and, smoke and heat detectors may not detect smoke or heat from fires on another level of the residence or building.

•*Software*

Most Summit products contain software. With respect to those products, Summit does not warranty that the operation of the software will be uninterrupted or error-free or that the software will meet any other standard of performance, or that the functions or performance of the software will meet the user's requirements. Summit shall not be liable for any delays, breakdowns, interruptions, loss, destruction, alteration or other problems in the use of a product arising out of, or caused by, the software.

Every fire is different in the amount and rate at which smoke and heat are generated. Smoke detectors cannot sense all types of fires equally well. Smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches or arson.

Even if the smoke detector or heat detector operates as intended, there may be circumstances when there is insufficient warning to allow all occupants to escape in time to avoid injury or death.

•*Alarm Notification Appliances*

Alarm Notification Appliances such as sirens, bells, horns, or strobes may not warn people or waken someone sleeping if there is an intervening wall or door. If notification appliances are located on a different level of the residence or premise, then it is less likely that the occupants will be alerted or awakened. Audible notification appliances may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners or other appliances, or passing traffic. Audible notification appliances, however loud, may not be heard by a hearing-impaired person.

•*Telephone Lines*

If telephone lines are used to transmit alarms, they may be out of service or busy for certain periods of time. Also the telephone lines may be compromised by such things as criminal tampering, local construction, storms or earthquakes.

•*Insufficient Time*

There may be circumstances when the system will operate as intended, yet the occupants will not be protected from the emergency due to their inability to respond to the warnings in a timely manner. If the system is monitored, the response may not occur in time enough to protect the occupants or their belongings.

•*Component Failure*

Although every effort has been made to make this system as reliable as possible, the system may fail to function as intended due to the failure of a component.

•*Inadequate Testing*

Most problems that would prevent an alarm system from operating as intended can be discovered by regular testing and maintenance. The complete system should be tested as required by national standards and the Local Authority Having Jurisdiction and immediately after a fire, storm, earthquake, accident, or any kind of construction activity inside or outside the premises. The testing should include all sensing devices, keypads, consoles, alarm indicating devices and any other operational devices that are part of the system.

•*Security and Insurance*

Regardless of its capabilities, an alarm system is not a substitute for property or life insurance. An alarm system also is not a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation.

IMPORTANT NOTE: End-users of the system must take care to ensure that the system, batteries, telephone lines, etc. are tested and examined on a regular basis to ensure the minimization of system failure.

Limited Warranty

Summit Systems Technologies warrants the original purchaser that for a period of two years from the date of manufacture, the product shall be free of defects in materials and workmanship under normal use. During the warranty period, Summit Systems Technologies shall, at its option, repair or replace any defective product upon return of the product to its factory, at no charge for labor and materials. Any replacement and/or repaired parts are warranted for the remainder of the original warranty or ninety (90) days, whichever is longer. The original owner must promptly notify Summit Systems Technologies in writing that there is defect in material or workmanship, such written notice to be received in all events prior to expiration of the warranty period.

International Warranty

The warranty for international customers is the same as for any customer within Canada and the United States, with the exception that Summit Systems Technologies shall not be responsible for any customs fees, taxes, or VAT that may be due.

Conditions to Void Warranty

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- damage incurred in shipping or handling;
- damage caused by disaster such as fire, flood, wind, earthquake or lightning;
- damage due to causes beyond the control of Summit Systems Technologies such as excessive voltage, mechanical shock or
- water damage;
- damage caused by unauthorized attachment, alterations, modifications or foreign objects;
- damage caused by peripherals (unless such peripherals were supplied by Summit Systems Technologies);
- defects caused by failure to provide a suitable installation environment for the products;
- damage caused by use of the products for purposes other than those for which it was designed;
- damage from improper maintenance;
- damage arising out of any other abuse, mishandling or improper application of the products.

Warranty Procedure

To obtain service under this warranty, please return the item(s) in question to the point of purchase. All authorized distributors and dealers have a warranty program. Anyone returning goods to Summit Systems Technologies must first obtain an authorization number. Summit Systems Technologies will not accept any shipment whatsoever for which prior authorization has not been obtained. NOTE: Unless specific pre-authorization in writing is obtained from Summit management, no credits will be issued for custom fabricated products or parts or for complete fire alarm system. Summit will at its sole option, repair or replace parts under warranty. Advance replacements for such items must be purchased.

Note: Summit Systems Technologies's liability for failure to repair the product under this warranty after a reasonable number of attempts will be limited to a replacement of the product, as the exclusive remedy for breach of warranty.

Disclaimer of Warranties

This warranty contains the entire warranty and shall be in lieu of any and all other warranties, whether expressed or implied (including all implied warranties of merchantability or fitness for a particular purpose) And of all other obligations or liabilities on the part of Summit Systems Technologies neither assumes nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

This disclaimer of warranties and limited warranty are governed by the laws of the province of Ontario, Canada.

Out of Warranty Repairs

Summit Systems Technologies will at its option repair or replace out-of-warranty products which are returned to its factory according to the following conditions. Anyone returning goods to Summit Systems Technologies must first obtain an authorization number. Summit Systems Technologies will not accept any shipment whatsoever for which prior authorization has not been obtained.

Products which Summit Systems Technologies determines to be repairable will be repaired and returned. A set fee which Summit Systems Technologies has predetermined and which may be revised from time to time, will be charged for each unit repaired.

Products which Summit Systems Technologies determines not to be repairable will be replaced by the nearest equivalent product available at that time. The current market price of the replacement product will be charged for each replacement unit.

WARNING: Summit Systems Technologies recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

NOTE: Under no circumstances shall Summit Systems Technologies be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of the product or any associated equipment, cost of capital, cost of substitute or replacement equipment, facilities or services, down time, purchaser's time, the claims of third parties, including customers, and injury to property.

SUMMIT MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ITS GOODS DELIVERED, NOR IS THERE ANY OTHER WARRANTY, EXPRESSED OR

