

Address Count

Address Count refers to the value of addresses that a device uses as viewed by the isolator. The total address count value of devices placed between isolators can be no more than 20. The total number of isolator modules that can be placed on the addressable loop is 40.

Mircom Model#	Description	Address Count
SII-200	Ion sensor	1
SIP-200	Photo sensor	1
SIM-200	Multisensor	1
SIH-200	Heat sensor	1
SIM-100P	Priority monitor module	3
SIM-101P	Mini priority monitor module	3
SIM-100R	Relay output module	3
SIM-100S	Sounder control module	6
SIB-4	Relay Base	5
SIB-6	Sounder base	1



SIM-100X Isolator Installation Instructions

General

The SIM-100X is designed to sense and isolate short-circuits on loops. It is a stand-alone device which is fitted into its own base.

Installation

The SIM-100X isolator must be installed in accordance with the applicable NFPA standards, local codes and jurisdictional authorities. Failure to follow these instructions may result in detectors failing to report an alarm condition. Summit is not responsible for devices which are improperly installed, maintained and tested.

Before installing the isolator check the continuity, polarity and insulation resistance of all wiring. Check that siting is accordance with the fire system drawings and conforms to all applicable local codes such as NFPA 72.

Mounting

The SIM-100X isolator is loop-powered and polarity sensitive and can be damaged if connected in reverse polarity.

1. Secure the Universal Mounting Plate to the Electrical Box.
2. Mount base securely to the Universal Mounting Plate.
3. Connect wiring following the diagram overleaf.
4. Ensure earth continuity is maintained using the earth terminal on the base if required.
5. Fit isolator into the base.

Canada
25 Interchange Way, Vaughan, Ontario, L4K 5W3
Tel: (905)-695-3549 , Fax: (905) 660-4113

USA
60 Industrial Parkway PMB 278, Cheektowaga, New York 14227
Tel Toll Free: (866)-786-6480, Fax Toll Free: (888) 660-4113

Website: www.mircom.com

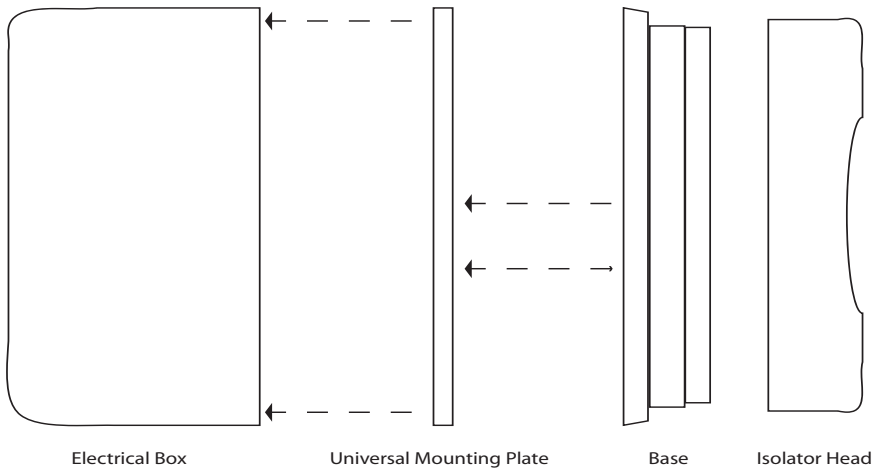


Fig 1 Mounting diagram

Wiring

All wiring terminals will accept solid or stranded cables up to 2.5mm².

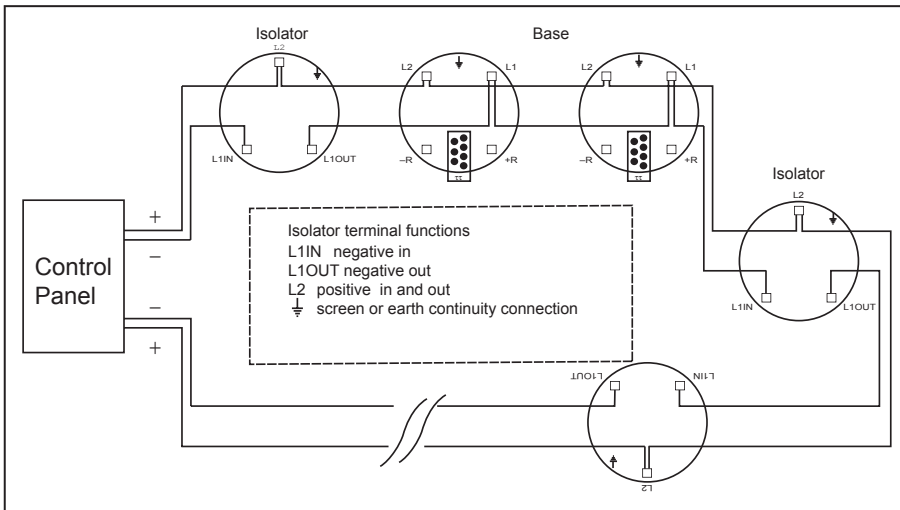


Fig 2 Isolating Base wiring diagram

Commissioning

It is important that the system be fully tested after installation. In normal operating conditions, apply short-circuits to the supply wiring at various points to confirm the isolators are functioning correctly. Ensure that any applicable local codes are adhered to.

LED Indicators

Yellow LED illuminated if a short-circuit is detected either side of the isolator.

Troubleshooting

Before investigating individual units for faults, it is very important to check that the system wiring is fault free. Shield continuity faults on a data loop or any ancillary zone wiring may cause communication errors.

Many fault conditions are the result of simple wiring errors.

Fault Finding

	Problem	Possible Cause
LED illuminated constantly	LED illuminated constantly	Short-circuit on loop wiring. Wiring reverse polarity. Too many devices between isolators.
Failure to isolate a short-circuit	Failure to isolate a short-circuit	Incompatible control panel. Incorrect wiring.

Technical Data

Environment	indoor, non-icing, non-condensing
Operating temperature	0°F (-20°C) to 155°F (54°C) 32°F (0°C) to 100°F (38°C) (UL approved continuous operating range)
Humidity	0 to 95%RH
Material	white polycarbonate V-0 to UL94

Electrical

Supply voltage	17-28V dc plus protocol voltage pulses
Current consumption	35µA at 24V
Maximum line current	1A

Compatibility Information

The isolator has been approved by Underwriters Laboratories Inc. For details of compatible control panels, please contact Summit.