

Limited Warranty

Summit warrants that for a period of two years from the date of purchase, the product shall be free of defects in material and workmanship under normal use and that in fulfillment of any breach of such warranty, Summit shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in materials and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Summit such as, lightning, excessive voltage, mechanical shock, water damage or damage arising out of abuse, alteration or improper application of the product.

The foregoing warranty shall apply only to the original buyer, and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Summit. This warranty contains the entire warranty. Summit neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Summit be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

Important!

Summit recommends that the entire system be completely tested on a regular basis. However, despite frequent testing and due to but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.



LT-2018SUM
Rev. 0

Canada

25 Interchange Way
Vaughan, ON, L4K 5W3
Tel: (905) 695-3549
Fax: (905) 660-4113
www.summit-vt.net

USA

60 Industrial Parkway
Cheektowaga, NY, 14227
Tel: 1-866-SUMMIT-0 (1-866-786-6480)
Fax: 888-660-4113

INSTALLATION INSTRUCTIONS



SRM-103 Relay Module

The SRM-103 relay module includes three relays with form 'C' contacts rated at 30VDC, 2A. Each relay is jumper programmable to activate on 'Alarm', 'Supervisory' or 'Trouble' mode. Refer to SFC-102 or SFC-105 *Installation Manual*.

Parts List

- Qty 1 SRM-103 module
- Qty 1 #4-40 pan head screw
- Qty 1 spacer
- Qty 3 jumpers

Specifications

- Standby current ... 0 mA
Add 8 mA for each relay programmed for 'Trouble'
- Alarm current ... 8 mA (for each relay programmed for alarm).
- Relay contacts Vmax ... 30Vdc
- Relay contacts Imax ... 2 A

NOTE: This component must be included in the control panel battery calculation. Refer to the Standby Battery Calculation Sheet (PN# 29005850) included with the control panel.


Installing the SRM-103 Module

The SRM-103 module mounts on the SFC-102/105 fire alarm control unit board as indicated below. Refer to Fig 1.

1. Screw the the 1/2 inch nylon hex spacer (provided) hand-tight onto the center pem stud.
2. Insert the the SRM-103 header pins into the header on the SFC-102/105 FACP.
3. Secure the relay module to the nylon spacer using the #4-40 screw provided.
4. Configure jumper for desired operating modes. Refer figure 1.
5. Route 14-18 AWG hookup wire through the panel access holes in accordance with local regulations.
6. Secure wire connections to relay terminals as required.
7. Refer to SFC-102 or SFC-105 *Installation Manual* for programming details.

SRM-103 RELAY MODULE INSTALLATION



Jumper Configuration

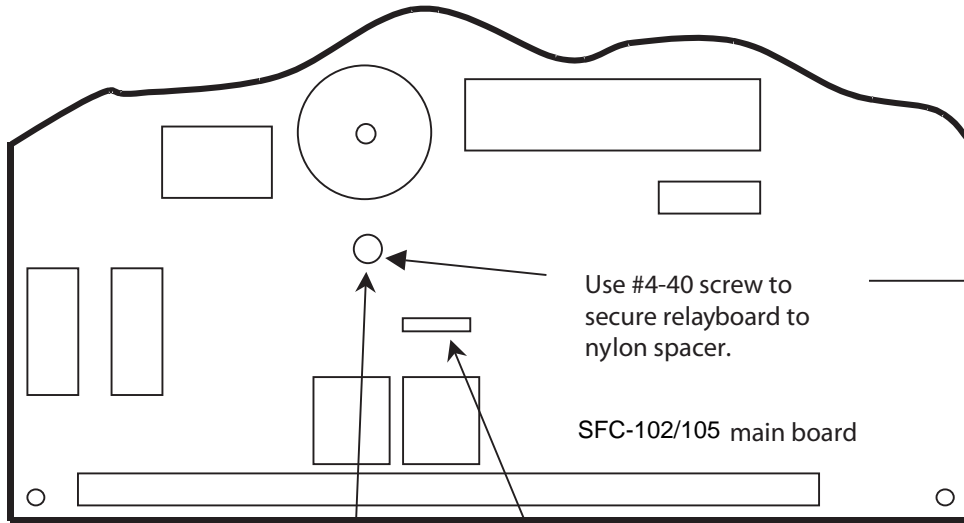

Screw nylon spacer onto this stud.

SRM-103 header pins insert into header socket on main PC board

Refer to SFC-102 or SFC-105 Fire Alarm Control Unit Manual for further details.

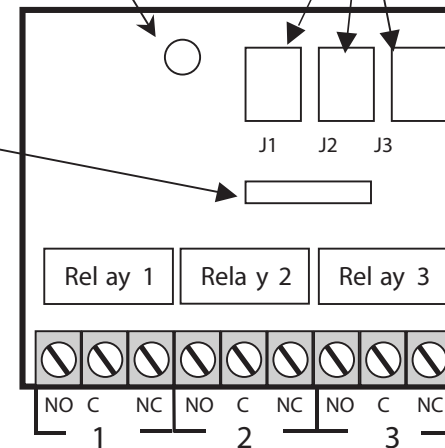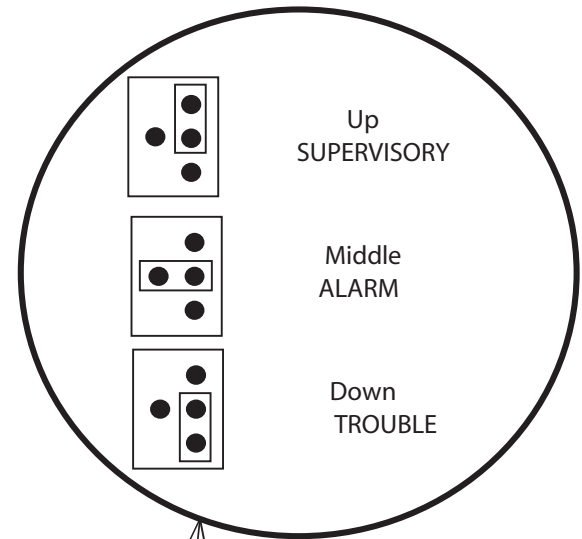

Note:
J1= Relay 1
J2 = Relay 2
J3 = Relay 3

Wire Gauge
14-18 AWG

Note:
Connect relay contacts to a power limited source